



# LS500h


RHD

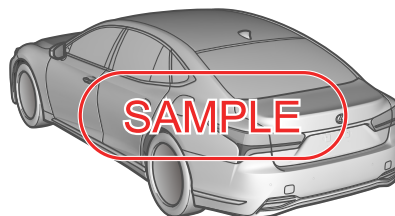

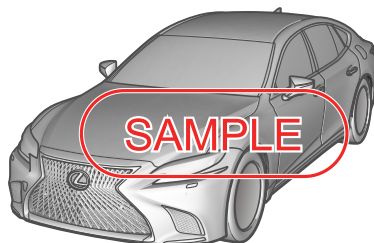





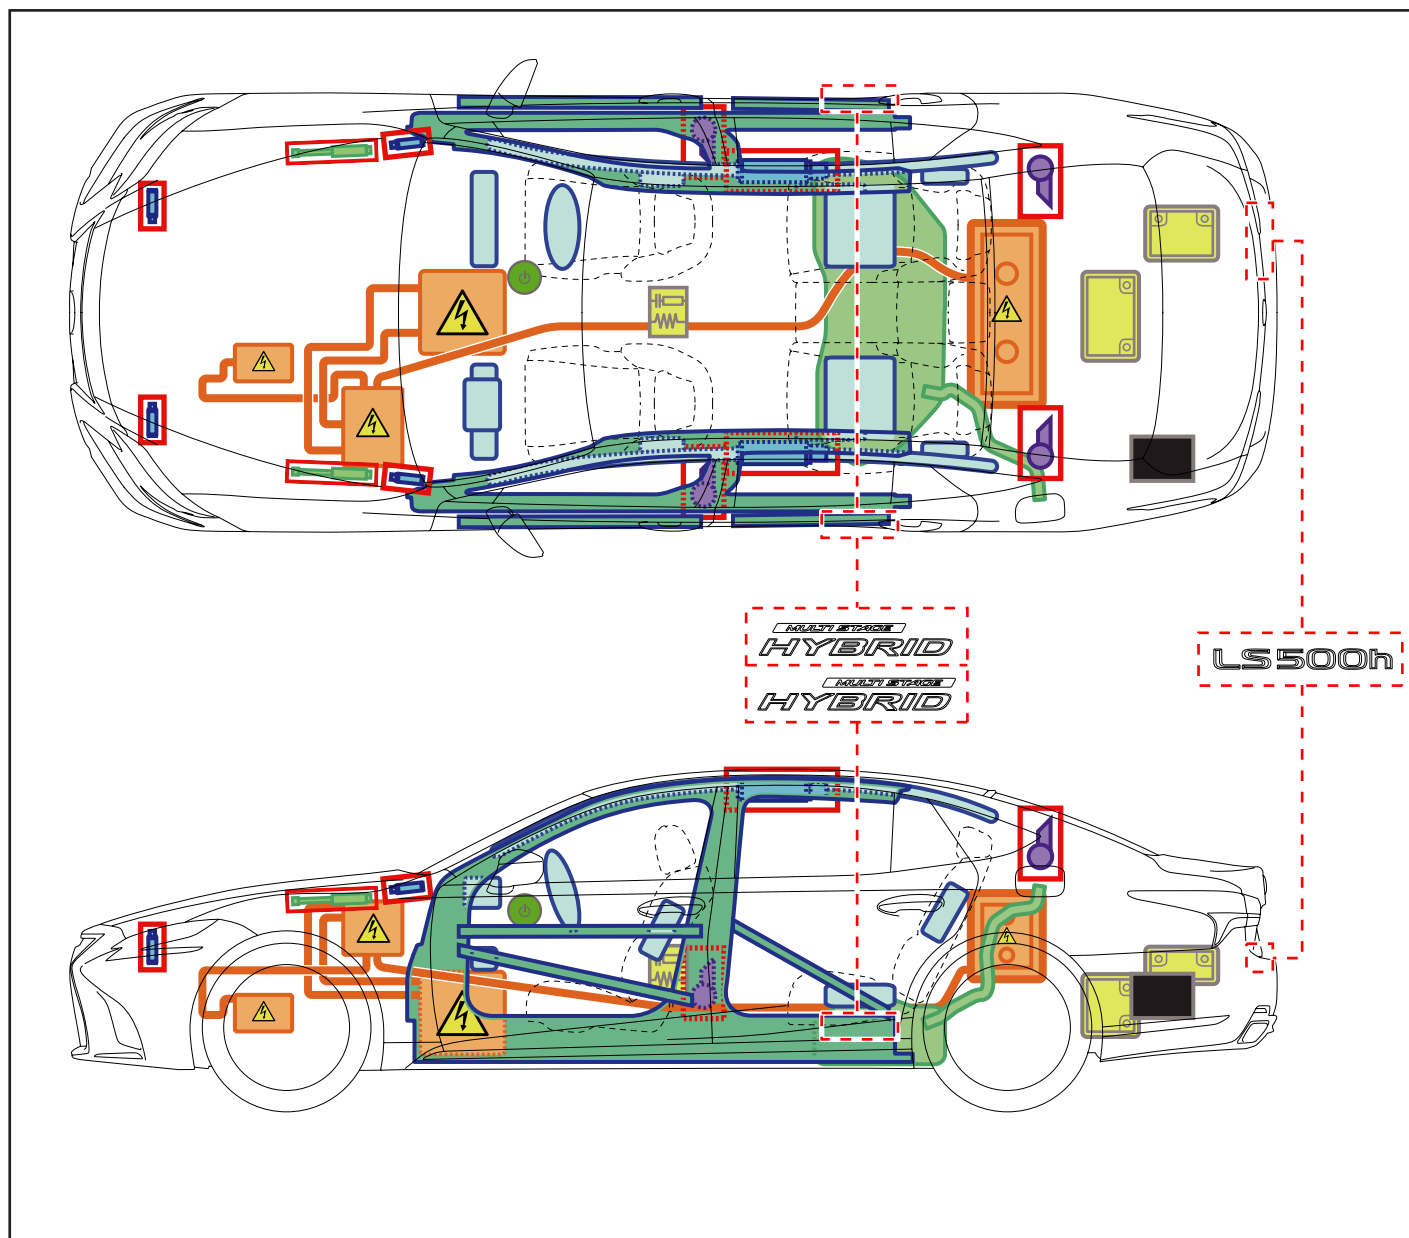



2017-10




**LEXUS  
HYBRID  
DRIVE**

**HV BATTERY  
Li-ion**




	IG/POWER SW		Fuse Box		12V Battery
	Airbag (incl. Inflator)		Inflator		High Voltage Battery
	High Voltage Components		Fuel Tank		Gas-filled Damper
	Seat Belt Pretensioner (Gas Generator)		Structural Reinforcements		Airbag Computer
—	—	—	—	—	—


## Disable Vehicle

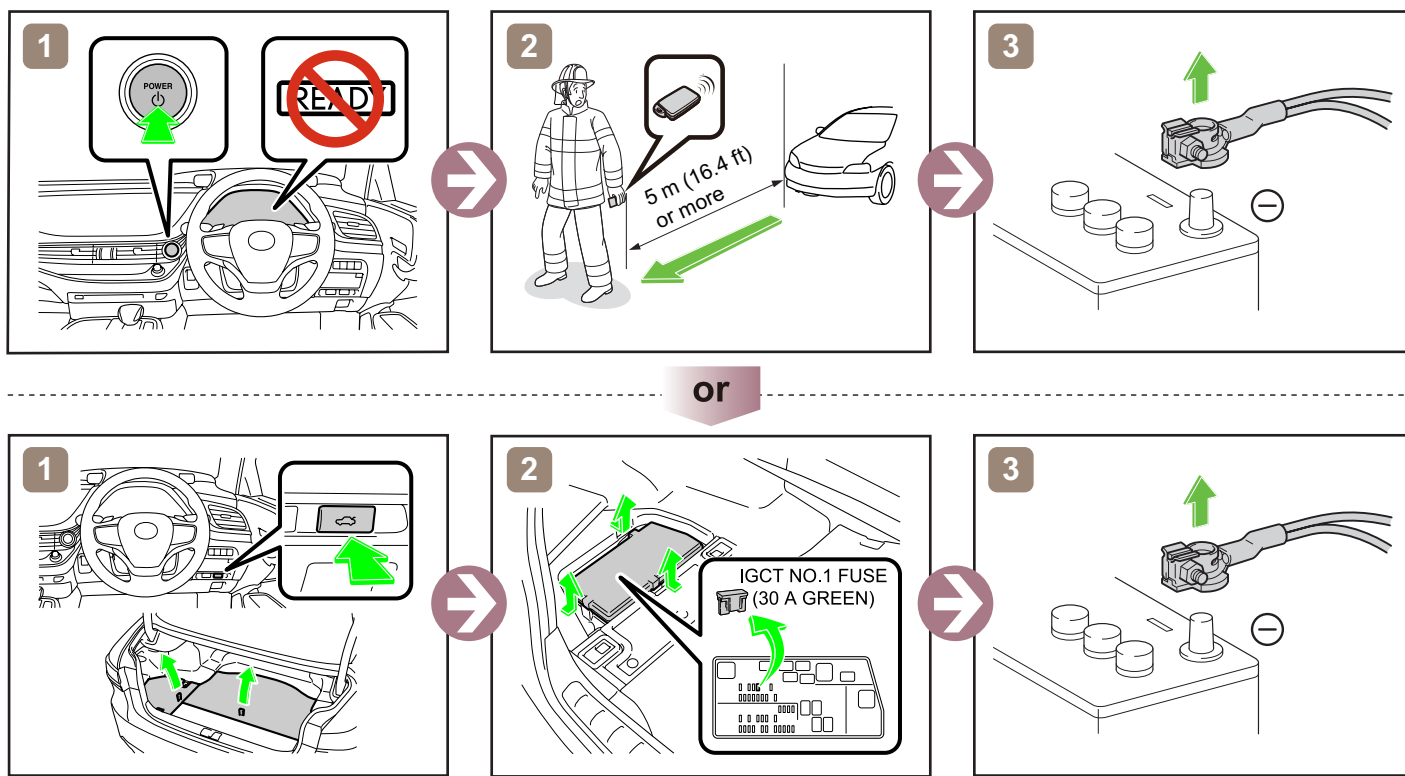

## Access to 12V Battery

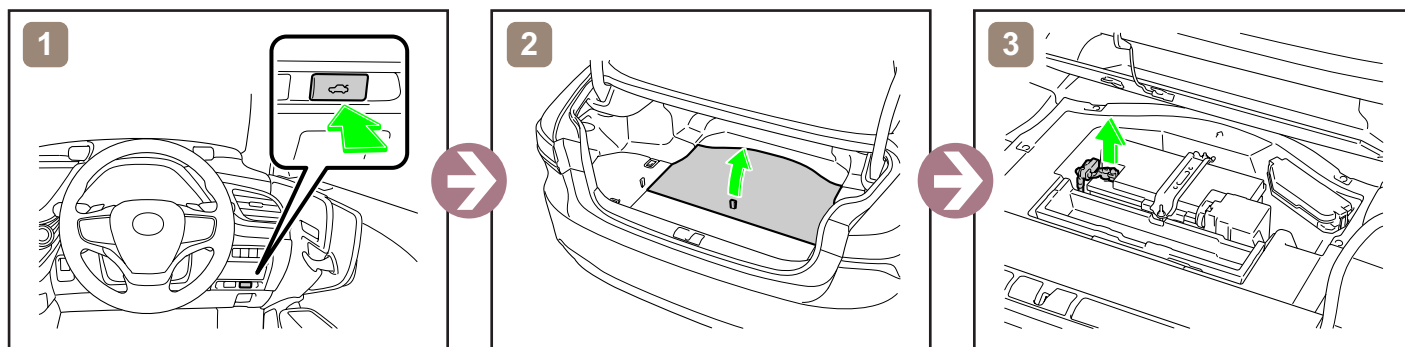

## Towing Information

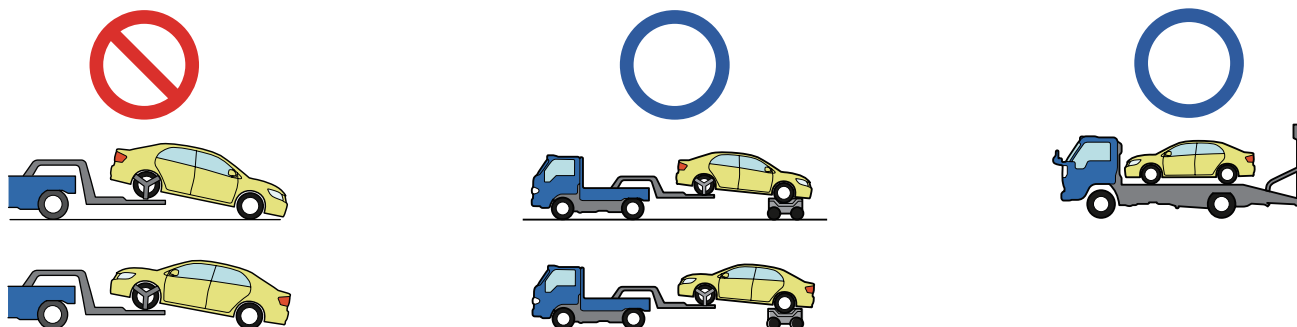

More details, please refer to "Emergency Response Guide".

<http://www.toyota.co.jp/#####/>