


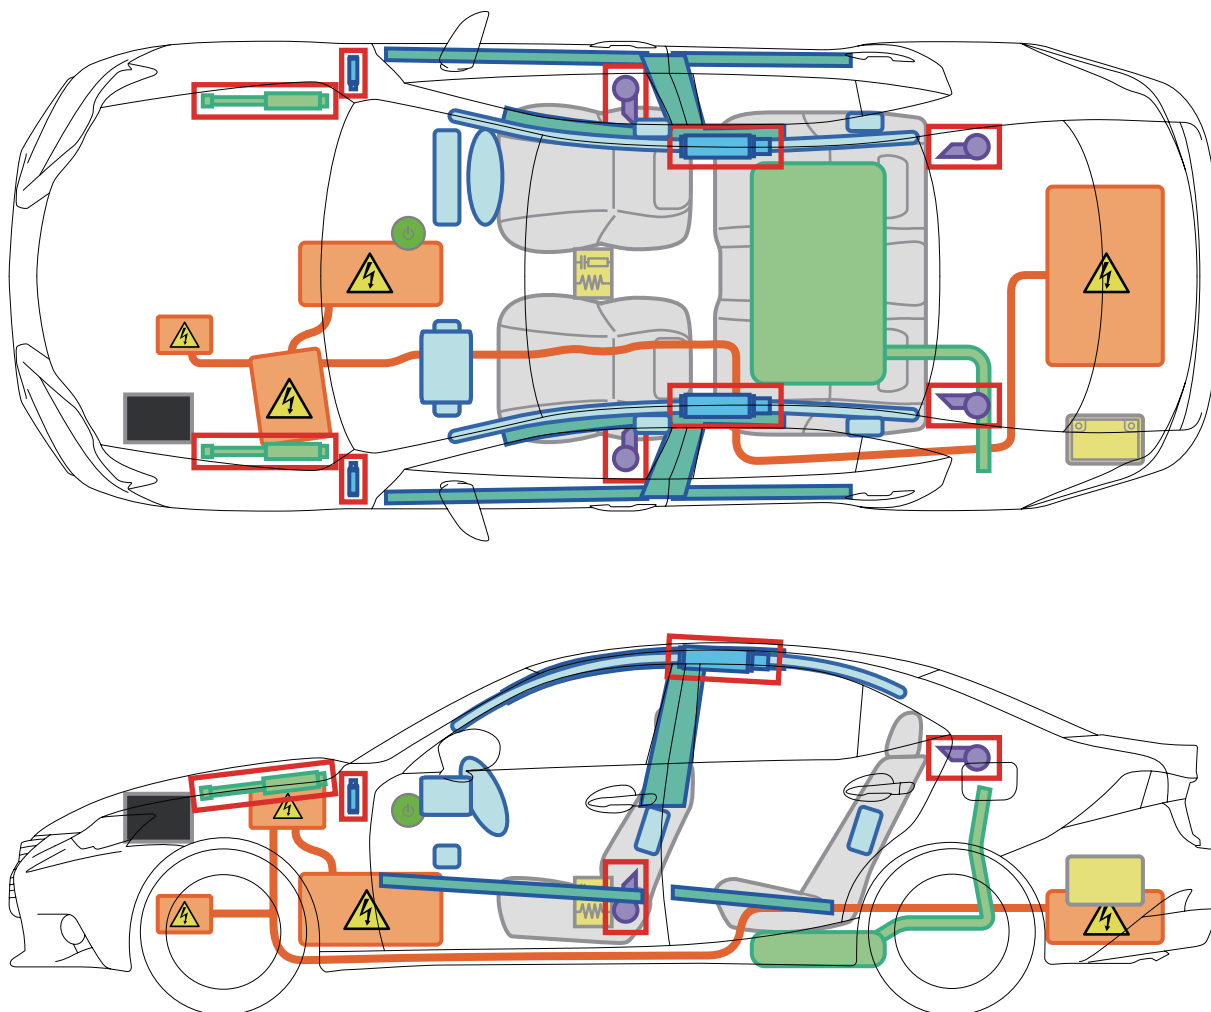










IS300h


RHD

2013-4




	IG SW		Fuse Box		12V Battery
	Airbag		Gas Generator		High Voltage Components
	Fuel Tank		Gas-filled Damper		Seat Belt Pretensioner
	Structural Reinforcements		Control Unit	-	-


Disable Vehicle

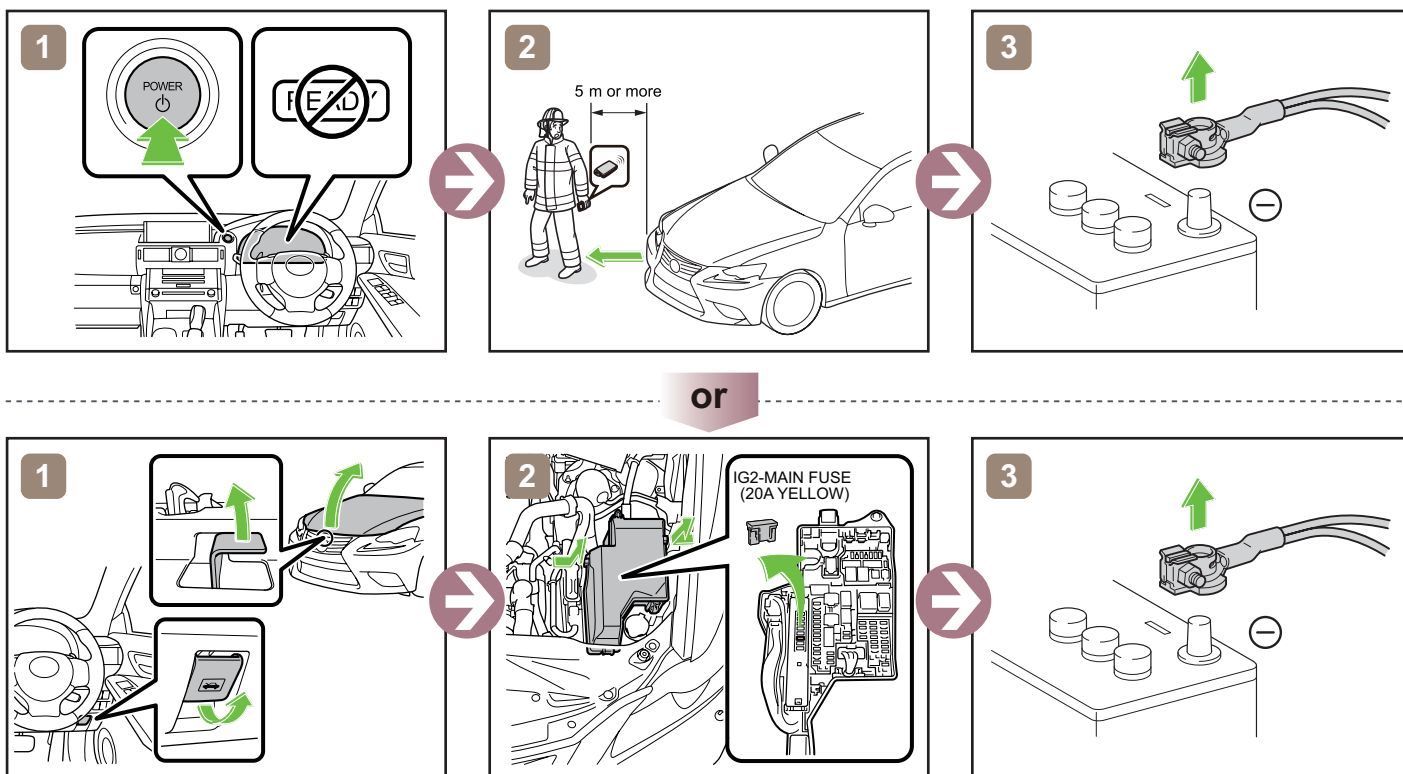

Access to 12V Battery

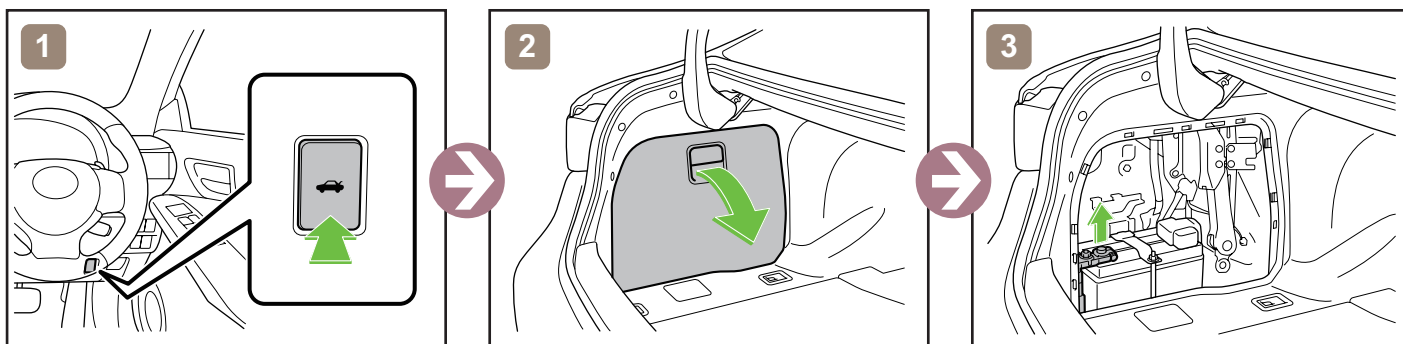

Towing Information

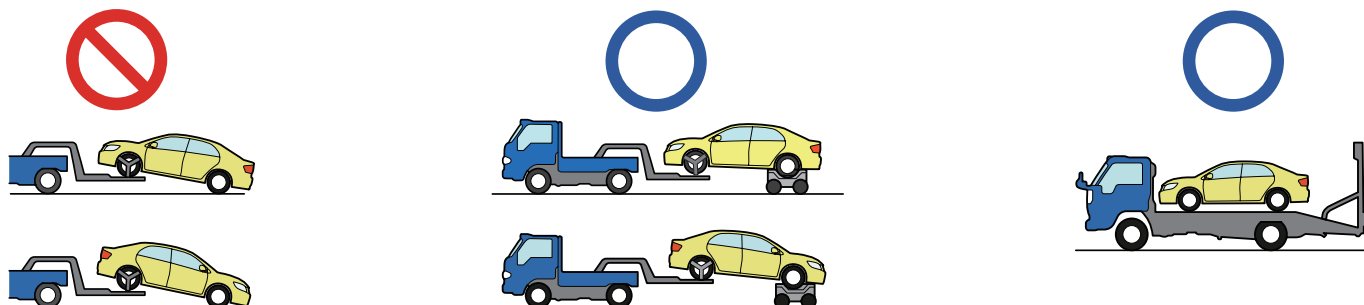

More details, please refer to "Emergency Response Guide".

<http://www.toyota.co.jp/#####/>